

# OSA 135RKGH (Digital)

# Reverse Cycle R410A Split System Outdoor Unit

#### **GENERAL**

OSA 135RKSGH – single phase version OSA 135RKTGH – three phase version

This OSA 135RKGH Outdoor Unit must be installed in accordance with all national and local safety codes.

#### **Options**

- 1. Vertical discharge grille.
- 2. Wall mounting brackets.
- 3. Anti-vibration mounts (rubber).
- 4. TZT-701 Controller kit (retro fitted to indoor unit)
- 5. Drain connection adaptors right angle.
- 6. Fault indicating auxillary relay board.

## **INSTALLATION**

#### **Positioning**

Refer to dimension diagram below for minimum clearances. Position the unit so that prevailing winds do not blow onto the exhaust to slow the fan, and one unit does not exhaust toward the inlet of another unit. The optional vertical discharge grille can be used to deflect prevailing winds and reduce clearances.

Mount either free standing or on a wall using the optional mounting brackets available.

#### Free Standing:

Fasten the unit down to a firm flat horizontal base using the four holes provided in the mounting rails.

When the unit is being installed on a roof it is recommended that the unit is installed on a substantial structure with vibration isolating springs or rubber mounts (optional extra) beneath the unit. These items are not supplied with the unit.

#### Wall Mounting Option:

Complete wall mounting instructions are supplied with the optional wall mounting kit.

#### Drain

Four drain holes are provided in the base. Three plastic bungs are supplied (loose) should you want to direct the condensate and/or rain water to one of the holes provided. Drain connection adaptors (25/13) are available as an optional extra.

OSA 135RKGH

Not to Scale

Net Weight 116 kg

# Installation & Maintenance

#### **REFRIGERATION PIPING**

#### Genera

The OSA 135 is shipped with a refrigerant charge sufficient for a 10 m line length. The matched indoor unit is shipped with a holding charge of nitrogen. OSA 135 units have shut-off service valves and swaged assemblies. Two loose pipe extensions are supplied to enable a choice of exit – side or rear; both require brazing.

### **Recommended Pipe Sizes**

Suction pipe : 19 mm OD Liquid pipe : 10 mm OD

#### Line Lengths

The standard unit allows for a line length up to 30 m. For line lengths between 30 m and 60 m, refer to **temperzone**'s *Split Systems Installation Guide (refer www.temperzone.biz/Technical Support)*. Refer also to *Oil Charge* overleaf.

Maximum line length when extended is 60m.

### **Height Separation Limits**

Outdoor Unit above Indoor Unit: 20 m Outdoor Unit below Indoor Unit: 20 m


### Vertical Risers


If the outdoor unit is to be installed above the indoor unit, then the suction riser should be trapped at the bottom of the vertical rise and then again at 8 m (maximum) intervals. This is to ensure oil return to the compressor. The trap to be a 'swan neck' curve in the pipe, with no change in the pipe size.


#### **Piping**

- Use clean sealed refrigeration grade piping and accessories designed specifically for R410A.
- 2. Cut pipe with a pipe cutter ONLY.
- 3. Use long radius bends (2x pipe dia.).
- 4. Insulate the suction (gas) line and seal all insulation joints.
- 5. Bi-flow type filter dryer may be fitted in the liquid line.
- Include a process point on the interconnecting pipework.
- 7. Ensure open pipe ends are sealed until the final connection is made.
- Immediately before removing brazed pipe connection's seal, reduce holding charge between connection points and service valves to atmospheric pressure.
  Warning: Failure to do so may cause injury.

# **Dimensions (mm)**

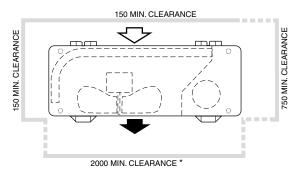

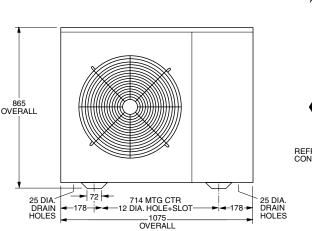

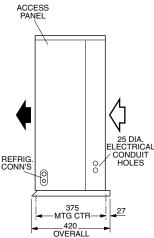

\* 600 min with optional Vertical Discharge Grille

### Charging

The unit is supplied with 3.3 kg of refrigerant HFC-410A (R410A) which is sufficient for up to 10 m of pipework between the indoor and outdoor units. Add 45 g of HFC-410A per metre above 10 m.

#### Procedure:

- Evacuate Indoor Unit and interconnecting pipework to a pressure of 500 microns and hold for 15 mins.
- Add refrigerant, if needed, via the Schraeder connection on the smaller of the Outdoor Unit's two service valves.
- Open the service valve at the Outdoor Unit to allow refrigerant to flow throughout the system.
- 4. Leak check all brazed and fitted joints.

#### IMPORTANT:

Step 8 of the 'Start Up Procedure' requires you to check that the superheat on the suction line (where it enters the Outdoor Unit) is between  $3^{\circ}C-5^{\circ}C$  on cooling cycle with an indoor air temperature in the range  $21^{\circ}-27^{\circ}C$  and outdoor air temperature in the range  $24^{\circ}-35^{\circ}C$ . If the conditions of the day do not allow this, use the heating cycle or other heat source to raise the indoor air temperature to about  $24^{\circ}C$ . Return to cooling cycle and blank off the outdoor coil to raise the head pressure to 400 psig (2760 kPag). Alter charge up or down to establish correct superheat.

#### WARNING:

This unit is designed for use ONLY with the refrigerant HFC-410A. The use of other refrigerants is NOT authorised or approved by the manufacturer and may cause operational problems such as poor performance and efficiency, loss of capacity, degradation of materials and refrigerant leaks. The use of flammable or explosive materials as a refrigerant creates the additional risks of fire and explosion which may result in property damage, personal injury or death.

# Oil Charge

For line lengths in excess of 30 m, Emkarate RL22CF polyolester oil (or similar) should be added to the refrigerant at the rate of 10 ml/m of suction piping. **Note**: Do not use mineral oil

### **ELECTRICAL REQUIREMENTS**

Electrical work must be done by a qualified electrician. The outdoor unit must be wired directly from a distribution board by means of a circuit breaker or H.R.C. fuse, and a mains isolator provided - preferably close to the Outdoor Unit.

Note: DO NOT USE REWIRABLE FUSES.

Standard units are suitable for use with controllers with either manual Heat/Cool selection or automatic changeover subject to the contact ratings of the thermostats.

The system is set up for the compressor to be controlled variably by a 0–10 volt DC signal that could be supplied by a BMS system or sophisticated controller (eg

temperzone's TZT-701 Controller).

If using the optional TZT-701 Controller, remove the link wire between terminals 'L+' and 'I5' on the Siemens Logo control; refer wiring diagram. Also, ensure both signal wires (0–10V DC) are used.

**Note**: The TZT-701 Controller can automatically switch the indoor fan off during de-ice, if selected, therefore no additional wiring is required to achieve this result.

A 24 hour power supply is required to the unit. Disconnect the crankcase heater if the total line length is less than 8 m.

#### SYSTEM CHECK TESTS

- Leave the remote switch in the off position and close the mains isolating switch.
  - A four hour delay period is required to allow the crankcase heater to drive any liquid refrigerant out of the compressor oil. Bypass the crankcase heater thermostat (CCHT) for this period only.
- Check that all fan motors are free running.
- OSA 135RKT only. Check for correct rotation of the compressor. If rotation is incorrect the compressor will not pump and will draw minimal current. To correct motor rotation, change the phasing at the main power terminal.
- Check that the thermostat is correctly wired to the unit and is set at the desired temperature.
- 5. Check that the air filters, if any, have been correctly installed.
- Check any supply air diffuser dampers are open.

# START UP PROCEDURE

Use the supplied Commissioning Sheet to help you complete the following procedure:

- Switch on the unit after the four hour delay period for the crankcase heater has expired. Ensure the crankcase heater thermostat has been reconnected.
- 2. Check the supply voltage.
- Measure the current draw on the compressor motor and on each fan motor. Check all readings against the specified values - particularly the indoor fan amps if the unit is installed in a free blow application.
- Fit gauges and measure the suction and discharge pressures.
  - **Important**: Gauges must be designed specifically for use with R410A.
- Test the operation of the high pressure safety control by switching off the outdoor unit's fan.
- Test the operation of the reversing valve by running the unit in both the heating and cooling mode.
- Check that the air flow over the outdoor unit's coil is adequate and that the fan is running smoothly.
- 8. Check the superheat refer charging procedure.

- 9. Check the supply air flow at each outlet.
- 10. Touch up any outdoor unit paintwork damage to prevent corrosion.

# **OUTDOOR UNIT CONTROLLER (OUC)**

The Outdoor Unit Controller (OUC) includes a temperature sensing head pressure control which enables the system to compensate for outdoor ambient temperatures below 20°C, and heating cycle above 15°C. The OUC also has features which protect against icing or overheating of coils, rapid cycling of the compressor and loss of refrigerant charge.

If the outdoor unit fans take some time to begin rotating when the system is powered on, or they don't appear to be rotating appropriately while the compressor is running, consult the OUC label on the electrical box. If necessary, refer to **temperzone** for further diagnostic information.

## **MAINTENANCE**

#### **Weekly For First Four Weeks**

- 1. Check indoor unit air filters (if fitted) and vacuum or wash clean as necessary.
- 2. Check condensate drain for free drainage.
- Check compressor compartment for oil stains indicating refrigerant leaks.
- 4. Check tightness of electrical connections.

#### Six Monthly

- Check the tightness of all fan and motor mountings.
- 2. Check tightness of electrical connections.
- 3. Check that fan motors are free running.
- 4. Check suction and discharge operating pressures.
- 5. Replace indoor unit air filters (if fitted).
- Check condensate drain for free drainage.

# Yearly

- Check all refrigerant piping for chafing and vibration.
- Check the operation of electric heaters if fitted.
- 3. Check air supply at all diffusers.
- 4. Check for excessive noise and vibration and correct as necessary.
- 5. Check for insulation and duct damage and repair as necessary.
- Remove lint and dust accumulation from outdoor coil fins.
- 7. Touch up any outdoor unit paintwork damage to prevent corrosion.

#### NOTE

The manufacturer reserves the right to change specifications at any time without notice or obligation. Certified dimensions available on request.

This pamphlet replaces the previous issue no. 3554 dated 03/11. Wiring revision C; liquid line to 10.

# Pipe Length Capacity Loss On Cooling Cycle Due to Pressure Drop

**Note:** Loss percentages are approximations only, due to piping variations. No allowance made for vertical piping.

Pipe Size (mm)		Equivalent Line Pipe Length (m)					Additional Pipe Length to allow per Bend	
Liquid	Suction	5	10	15	20	30	Suction Pipe Size OD	19 mm
10	19	0.75 %	1.5 %	2.25 %	3 %	5 %	Long 90° Radius (i.e. 2 x pipe dia.)	0.4 m

