

OSA 159RKTGH (Digital c/w UC7 Controller)

Reverse Cycle R410A Split System Outdoor Unit

Installation & Maintenance

GENERAL

This OSA 159RKTGH Outdoor Unit must be installed in accordance with all national and local safety codes.

Options

1. T.ZT-100 Room Temperature Controller
2. Signal Input for Controller 0–10V (ref p.2).
3. Vertical discharge grille (2 required).
4. Wall mounting brackets.
5. Anti-vibration mounts (rubber).
6. Drain connection adaptors - right angle.

INSTALLATION

Positioning

Refer to dimension diagram below for minimum clearances. Position the unit so that prevailing winds do not blow onto the exhaust to slow the fan, and one unit does not exhaust toward the inlet of another unit. A generous clearance in front of the fan will improve performance in extreme conditions. The surroundings must not induce immediate recirculation of air from the front to the back of the unit. The optional vertical discharge grilles can be used to deflect

prevailing winds and reduce clearances.

Mount either free standing or on a wall using the optional mounting brackets available.

Free Standing :

Fasten the unit down to a firm flat horizontal base using the four holes provided in the mounting rails.

When the unit is being installed on a roof it is recommended that the unit is installed on a substantial structure with vibration isolating springs or rubber mounts (optional extra) beneath the unit. These items are not supplied with the unit.

Wall Mounting Option:

Complete wall mounting instructions are supplied with the optional wall mounting kit.

Drain

Four drain holes are provided in the base. Three plastic bungs are supplied (loose) should you want to direct the condensate and/or rain water to one of the holes provided. Drain connection adaptors (25/13) are available as an optional extra.

REFRIGERATION PIPING

General

The OSA 159 is shipped with a refrigerant charge sufficient for a 10 m line length. The matched indoor unit is shipped with a holding charge of nitrogen. OSA 159 units have shut-off service valves and swaged assemblies. Two loose pipe extensions are supplied to enable a choice of exit – side or rear; both require brazing.

Recommended Pipe Sizes

Suction pipe : 22 mm OD
Liquid pipe : 13 mm OD

Line Lengths


The standard unit allows for a line length of:
- up to 60m with a 22mm suction pipe and 13mm liquid pipe, or
- up to 15m with a 16mm suction pipe and 10mm liquid pipe.

No extensions.


Height Separation Limits

Outdoor Unit above Indoor Unit : 20 m
Outdoor Unit below Indoor Unit : 20 m

Dimensions (mm)

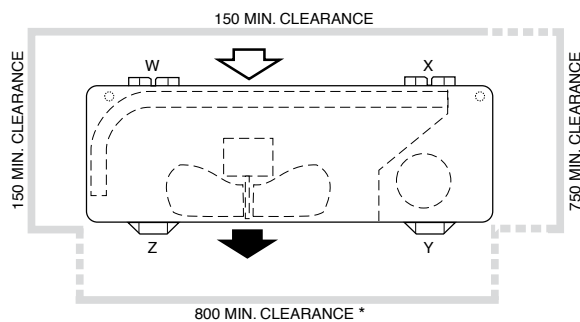


OSA 159RK

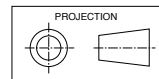

Not to Scale

POINT LOADS (kg)			
W	X	Y	Z
20	45	45	24

Net Weight 134 kg

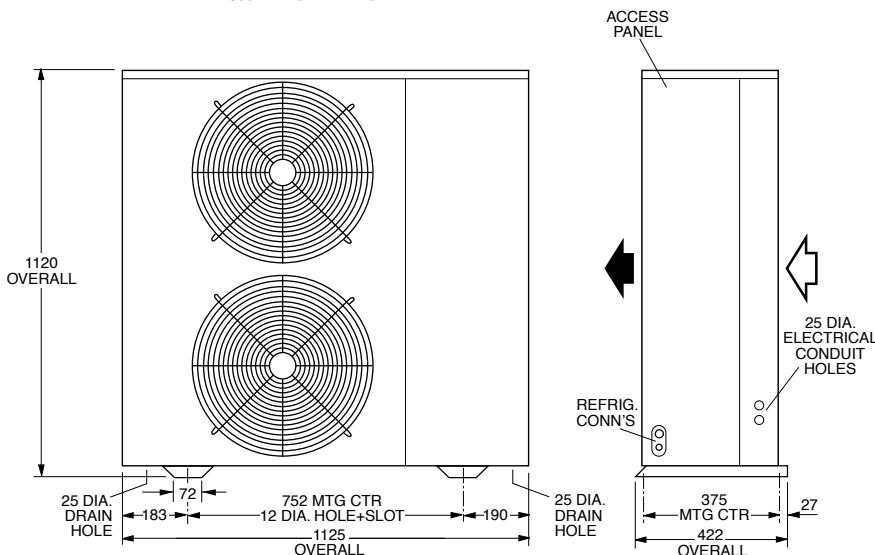

* 600 min with optional Vertical Discharge Grille

Vertical Risers

If the outdoor unit is to be installed above the indoor unit, then the suction riser should be trapped at the bottom of the vertical rise and then again at 8 m (maximum) intervals. This is to ensure oil return to the compressor. The trap to be a 'swan neck' curve in the pipe, with no change in the pipe size.

Piping

1. Use clean sealed refrigeration grade piping and accessories designed specifically for R410A.
 2. Cut pipe with a pipe cutter ONLY.
 3. Use long radius bends (2x pipe dia.).
 4. Insulate the suction (gas) line and seal all insulation joints.
 5. Bi-flow type filter dryer may be fitted in the liquid line.
 6. Include a process point in the interconnecting pipework.
 7. Ensure open pipe ends are sealed until the final connection is made.
 8. Immediately before removing brazed pipe connection's seal, reduce holding charge between connection points and service valves to atmospheric pressure.
- Warning:** Failure to do so may cause injury.

Charging

The unit is supplied with refrigerant HFC-410A (R410A) sufficient for up to 10 m of pipework between the indoor and outdoor units; refer wiring diagram specification table for amount. Add 60 g of HFC-410A per

metre above 10 m.

Procedure:

1. Evacuate Indoor Unit and interconnecting pipework to a pressure of 500 microns and hold for 15 mins.
2. Add refrigerant, if needed, via the Schraeder connection on the smaller of the Outdoor Unit's two service valves.
3. Open the service valve at the Outdoor Unit to allow refrigerant to flow throughout the system.
4. Leak check all brazed and fitted joints.

IMPORTANT :

Step 8 of the 'Start Up Procedure' requires you to check that the superheat on the suction line (where it enters the Outdoor Unit) is between 3°C – 5°C on cooling cycle with an indoor air temperature in the range 21° – 27°C and outdoor air temperature in the range 24° – 35°C. If the conditions of the day do not allow this, use the heating cycle or other heat source to raise the indoor air temperature to about 24°C. Return to cooling cycle and blank off the outdoor coil to raise the head pressure to 400 psig (2760 kPag). Alter charge up or down to establish correct superheat.

WARNING:

This unit is designed for use ONLY with the refrigerant HFC-410A. The use of other refrigerants is NOT authorised or approved by the manufacturer and may cause operational problems such as poor performance and efficiency, loss of capacity, degradation of materials and refrigerant leaks. **The use of flammable or explosive materials as a refrigerant creates the additional risks of fire and explosion which may result in property damage, personal injury or death.**

Oil Charge

For line lengths in excess of 40 m, Emkarate RL22CF polyolester oil (or similar) should be added to the refrigerant at the rate of 10 ml/m of suction piping. **Note:** Do not use mineral oil.

ELECTRICAL REQUIREMENTS

Electrical work must be done by a qualified electrician. The outdoor unit must be wired directly from a distribution board by means of a circuit breaker or H.R.C. fuse, and a mains isolator provided - preferably close to the Outdoor Unit.

Note: DO NOT USE REWIRABLE FUSES.

Standard units are suitable for use with thermostats with either manual Heat/Cool selection or automatic changeover subject to the contact ratings of the thermostats.

The matched ISD indoor unit is supplied with a 25m coil sensor lead that must be connected as per the wiring diagram.

The system is set up for the compressor to be controlled variably by:

1. T-ZT-100 Controller (via modbus),
2. 0-10V dc command via BMS modbus, or
3. 0-10V dc command via a client supplied external controller.

If option 3 is chosen, then the optional Signal Input for Controller 0-10V is required (temperzone Part No. 201-000-386).

If a T-ZT-100 Controller is used then variable capacity control is automatically included and no additional wiring is required.

Note: The T-ZT-100 Controller can automatically switch the indoor fan off during de-ice, if selected, therefore no additional wiring is required to achieve this result.

A 24 hour power supply to the crankcase heaters is required, otherwise the warranty is void.

SYSTEM CHECK TESTS

1. Leave the remote switch in the off position and close the mains isolating switch.
A four hour delay period is required to allow the crankcase heater to drive any liquid refrigerant out of the compressor oil.
2. Check that all fan motors are free running.
3. Check for correct rotation of the compressor. If rotation is incorrect the compressor will not pump and will draw minimal current. To correct motor rotation, change the phasing at the main power terminal.
4. Check that the thermostat is correctly wired to the unit and is set at the desired temperature.
5. Check that the indoor coil sensor lead is correctly wired to the unit.
6. Check that the air filters, if any, have been correctly installed.
7. Check any supply air diffuser dampers are open.

START UP PROCEDURE

Use the supplied Commissioning Sheet to help you complete the following procedure:

1. Switch on the unit after the four hour delay period for the crankcase heater has expired.
2. Check the supply voltage.
3. Measure the current draw on the compressor motor and on each fan motor. Check all readings against the specified values - particularly the indoor fan amps if the unit is installed in a free blow application.
4. Fit gauges and measure the suction and discharge pressures.
Important: Gauges must be designed specifically for use with R410A.
5. Test the operation of the high pressure safety control by switching off the outdoor unit's fan.
6. Test the operation of the reversing valve by running the unit in both the heating and cooling mode.
7. Check that the air flow over the outdoor unit's coil is adequate and that the fan is running smoothly.
8. Check the superheat - refer charging procedure.
9. Check the supply air flow at each outlet.
10. Touch up any outdoor unit paintwork damage to prevent corrosion.

UNIT CONTROLLER (UC7)

The Unit Controller provides system protection functions such as coil frost protection, de-icing, high head pressure and low suction pressure cut-out. It also protects against rapid cycling of the compressor(s) and loss of refrigerant. Various methods of head pressure control (or limiting) are employed in temperzone units. The particular method used varies from model to model, but is also handled by the Unit Controller. In combination, these features deliver optimised performance across a wide operating temperature range.

As a result of the UC's control of these inter-related functions, the outdoor fans may take some time to start rotating after each compressor start. They may also run on when the compressor stops. The fans will stop during a de-ice cycle and the speed will vary either smoothly, or in steps, in order to protect against excessively low or high head pressure.

Refer to UC7 Controller label on the unit or www.temperzone.biz for operation & fault diagnostics information.

MAINTENANCE

Weekly For First Four Weeks

1. Check indoor unit air filters (if fitted) and vacuum or wash clean as necessary.
2. Check condensate drain for free drainage.
3. Check compressor compartment for oil stains indicating refrigerant leaks.
4. Check tightness of electrical connections.

Six Monthly

1. Check the tightness of all fan and motor mountings.
2. Check tightness of electrical connections.
3. Check that fan motors are free running.
4. Check suction and discharge operating pressures.
5. Replace indoor unit air filters (if fitted).
6. Check condensate drain for free drainage.

Yearly

1. Check all refrigerant piping for chafing and vibration.
2. Check the operation of electric heaters if fitted.
3. Check air supply at all diffusers.
4. Check for excessive noise and vibration and correct as necessary.
5. Check for insulation and duct damage and repair as necessary.
6. Remove lint and dust accumulation from outdoor coil fins.
7. Touch up any outdoor unit paintwork damage to prevent corrosion.

NOTE


Specifications are subject to change without notice due to the manufacturer's ongoing research and development programme.

Pipe Length Capacity Loss

On Cooling Cycle Due to Pressure Drop

Note : Loss percentages are approximations only, due to piping variations. No allowance made for vertical piping.

Pipe Size (mm)		Performance Loss per additional 10m beyond first 5m.	Additional Pipe Length to allow per Suction Pipe Bend Long 90° Radius (2 x pipe dia.)
Liquid	Suction		
10	16	4.0 %	0.30 m
13	22	2.1 %	0.50 m

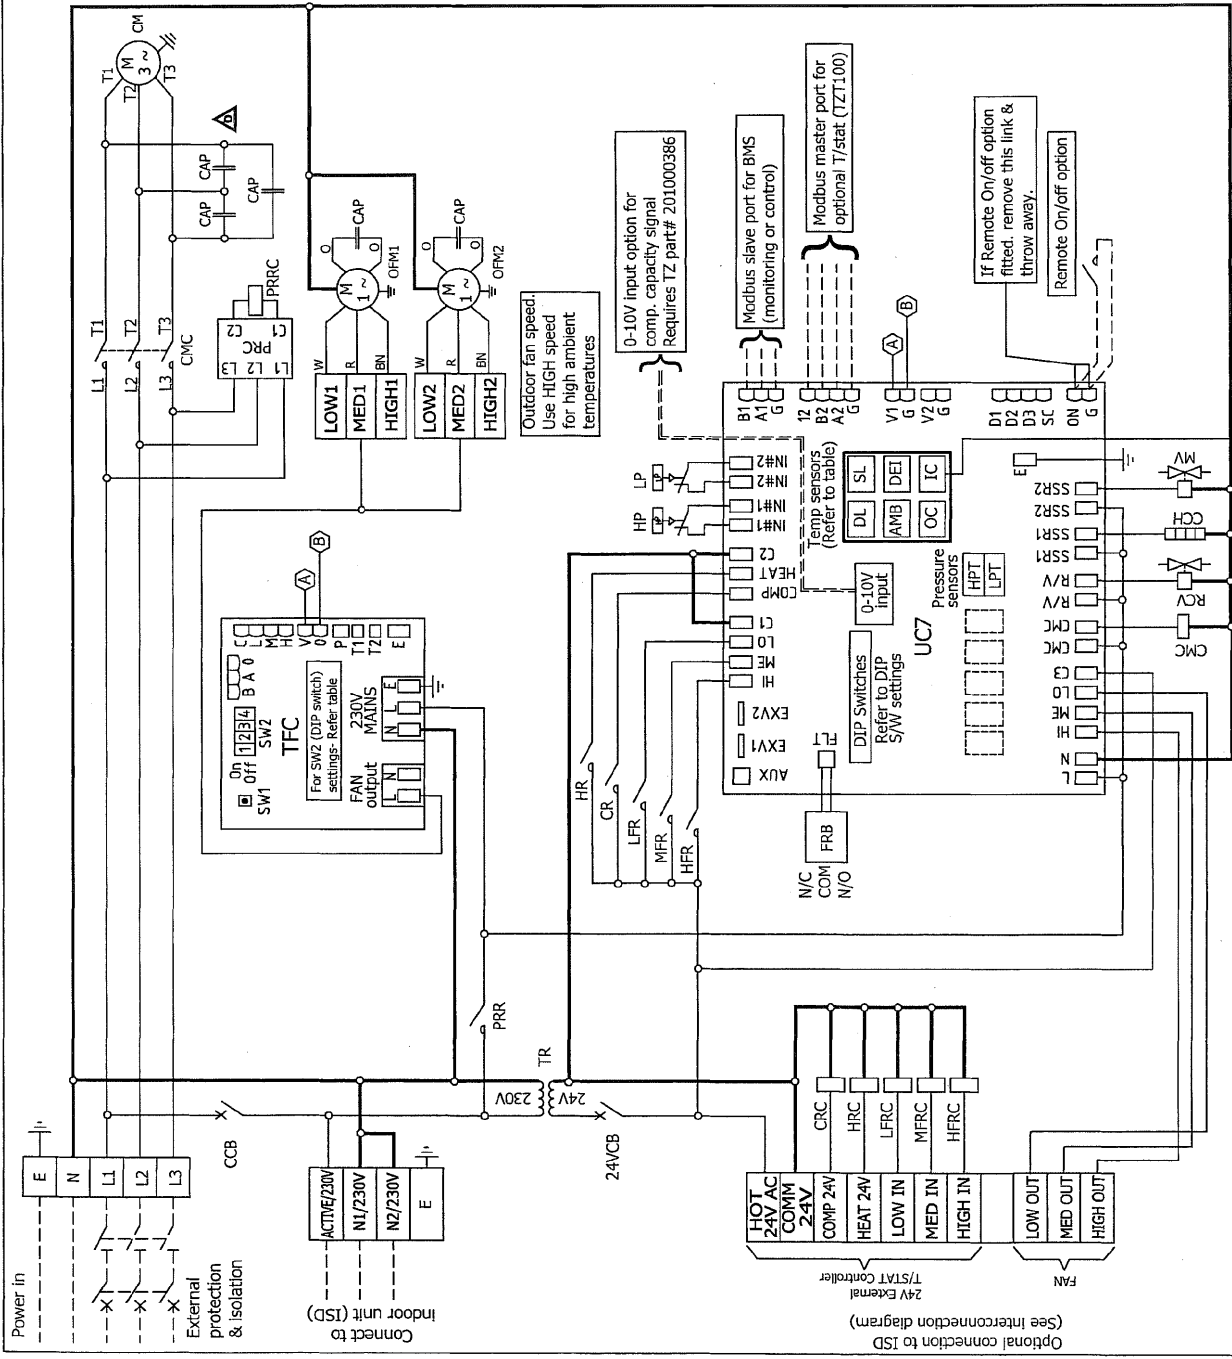

Capacities - Nett to AS/NZS 3823		OSA 159RKTGH
Cooling -	KW	ISD 159K 14.18
Heating - Reverse Cycle	KW	ISU 159K 13.34
Electrical Input		13.72
Cooling -	KW	4.37
Heating - Reverse Cycle	KW	3.67
E.E.R. (Cooling)	KW/KW	3.244
A.E.E.R. (Cooling)	KW/KW	3.220
Electrical		
Supply required 3Ph 342-436V ~ 50Hz Including voltage fluctuation limits		
Compressor type - Scroll		
Compressor (3Ph) run amps rated conditions	A/Ph	6.5 6.3
Power factor correction capacitors	MFD	8 x3
Oil type - Polyolester (P.O.E.)		
Indoor Fan Motor (1Ph)	KW	1.25
Indoor fan motor (1Ph) Full load amps	A	6.50
Outdoor fan motor (1Ph) Full load amps	A	1.43 x2
Outdoor motor capacitor	MFD	5 x2 5 x2
Running amps (Total)	A	8.2/6.5/6.5 9.5/6.5/6.5
Max running amps (Total)	A	12
24VDC 24 Volt circuit breaker	A	10
Unit Weight - Nett	Kg	134
Unit precharge (10 metre line length) 4.90 Kg (R410A Refrigerant) Base charge unit 4.30 Kg Plus 60 grams per metre line length. (Based on dia 12.7 liq line & dia 22 gas line). Add additional oil, 10ml per metre over 40 metre line length.		
CAP Capacitor	LFR	Low I/D Fan Relay
CCB Control Circuit Breaker	LFCR	Low I/D Fan Relay Coil
CCH CrankCase Heater	LP	Low Pressure Control
CM Compressor Motor	MFR	Med I/D Fan Relay
CMC Compressor Contactor	MFCR	Med I/D Fan Relay Coil
CMCC Compressor Contactor Coil	MV	Modulating Valve
CR Compressor Relay 24 V Control	OFM	Outdoor Fan Motor
CRB Compressor Relay Coil 24v	PRC	Phase Rotation Control
FRC Fault Relay Board	PRR	Phase Rotation Relay
HP High Pressure Control	PRRC	Phase Rotation Relay Coil
HR Heating Relay	RCV	Reverse Cycle Valve
HFR Heating Relay Coil	TFC	Triac Fan Controller
HFR High I/D Fan Relay	TR	Transformer
HFR High I/D Fan Relay Coil	UC7	Unit Controller 7
Temperature Sensor		
Sensor	Color	
DL Discharge	Red	
SL Suction	Blue	
AMB Ambient	Black	
DEI Deice	Blue	
OC O/D Coil	Yellow	
IC I/D Coil	Yellow	

Title		OSA 159RKTGH CW UC7
Wiring schematic		
TFC SW2 (DIP S/W) settings	DIP	On/Off
1,2,3,4	Off	
UC7 DIP switch settings		
DIP switch	↑ On/Off ↓	
2,4	On	
1,3,5,6,7,8,9,10,11,12,13,14,15,16	Off	



Plot date	24-06-15	Drawn S.D.H.	Drawn No.	291-000-312	Revision	D
temperzone Ltd		Aprvd SK				

ISSUE	MODIFICATION	ECN	DATE	APRVD	Client wiring	Visit www.temperzone.biz for client wiring diagrams
D	Added PFC capacitors	N375725-06-15	S.D.H.			

For indoor unit without t/stat fitted, connect 25m extension lead (part no. 201.000049) - Supplied with ISD Unit
UC7 'IC' terminal to indoor unit coil sensor.

This pamphlet replaces the previous
issue no. 3955 dated 08/14.
Wiring revision D.