


## **Safety Drain Tray**

### for ISD 83K-298K, IMD 95-280

## **Assembly** Not to Scale

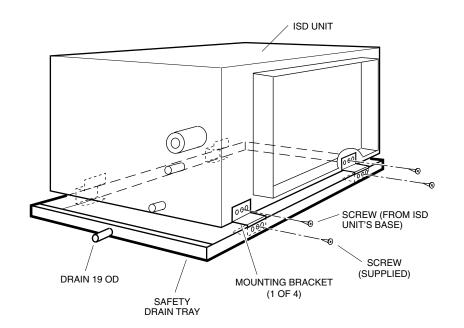

	Dimensions (mm)			Net Wat
For	L	W	D	kg
ISD 83K	860	580	25	3
ISD 96/110 K	985	580	25	3
ISD 135/155 K	1105	575	25	5
ISD 156K	1620	575	25	6
ISD 200K	1460	575	25	4
ISD 230K	1620	575	25	6
ISD 270/298 K	1600	580	25	8
IMD 95	845	555	25	2.5
IMD 135	955	555	25	3
IMD 170	1170	555	25	3
IMD 210	1245	555	25	3
IMD 280	1375	555	25	4

### Note

Materials and specifications subject to change without notice due to the manufacturer's ongoing research and development programme.

# Installation Instructions

### **GENERAL**

The optional Safety Drain Tray has been designed to conveniently fit the following **temperzone** units:

Model	Drain Tray
ISD 83K:	Item No. 525 000 039
ISD 96/110 K:	Item No. 525 000 041
ISD 135/155 K:	Item No. 525 000 042
ISD 156K:	Item No. 525 000 048
ISD 200K:	Item No. 525 000 047
ISD 230K:	Item No. 525 000 048
ISD 270/298 K:	Item No. 525 000 045
IMD 95:	Item No. 325 000 068
IMD 135:	Item No. 325 000 070
IMD 170:	Item No. 325 000 072
IMD 210:	Item No. 325 000 073
IMD 280:	Item No. 325 000 076

#### **COMPONENTS**

Check that the following items are supplied and are in good order:

- 1. Safety drain tray
- 2. Mounting brackets (x4)
- 2. Mounting screws (x4)

### **INSTALLATION**

The safety drain tray is best secured to the ISD unit **after** the unit has been suspended in the ceiling, however it is possible to fit it **before** if circumstances make this easier.

- Unscrew the brackets from their temporary shipping position, inside the drain tray, and retain the screws.
- The drain tray has pre-drilled holes designed to align with the screws on the unit. One at a time, remove a screw from each bottom corner of the ISD unit and fit a bracket using the same screws.
- Position the drain tray's pipe exit so it is at the same end as the ISD unit's drain pipe exit (as per diagram left).
- Supporting the drain tray from underneath, then secure the drain tray to each bracket using the supplied screws.
- Connect the drain pipe to a suitable drain line with an appropriate slope to allow free drainage. Test the drain with water to ensure it clears safely.

**DO NOT** let the ISD/IMD unit's condensate drain exit into this safety drain tray.

### **MAINTENANCE**

Check the safety drain tray every six months for free drainage.

This pamphlet replaces the previous issue no. 3295 dated 01/10. ISD 155K replaces 160K; 156K added.

© temperzone limited 2010 10/10 Pamphlet No. 3505