


Models: RAS-4HVRNM2, RAS-5HVRNM2, RAS-6HVRNM2 and RAS-7HVRNM2

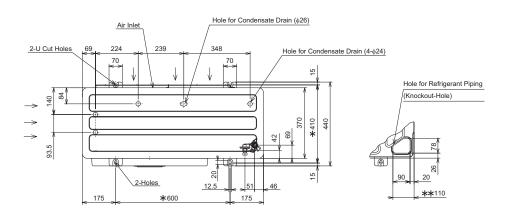

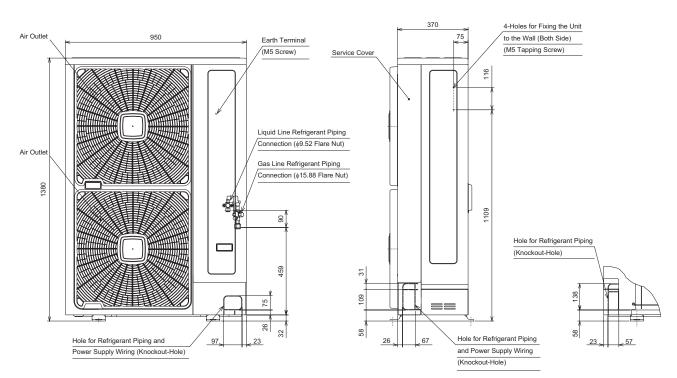

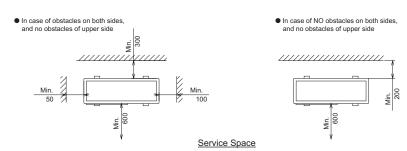

Drain Water

Drain water is caused during a defrosting operation.

- Choose a place where well drainage is available.
 Provide a groove for dtain.
 Do not provide an upward slope from the unit to avoid reverse flow of the drain.
 Provide a second drain pan under the outdoor unit to collect drain water securely.

Unit: mm

NOTES:

- 1. Refrigerant is factory charged for actual piping lenth and no additional charge less than 30 meters is required in the field.
- Additional charge more than 30 meters is required in the field.
- 2. There are stop valves in the cabinet.
- 3. In the case that dimension of 110 marked with ** is provides, it is possible to perform piping work from the bottom without interference such as foundation, etc.
- 4. The dimension marked with ***** indicates the mounting pitch dimension for anchor bolts.

1-50 TC-12001