
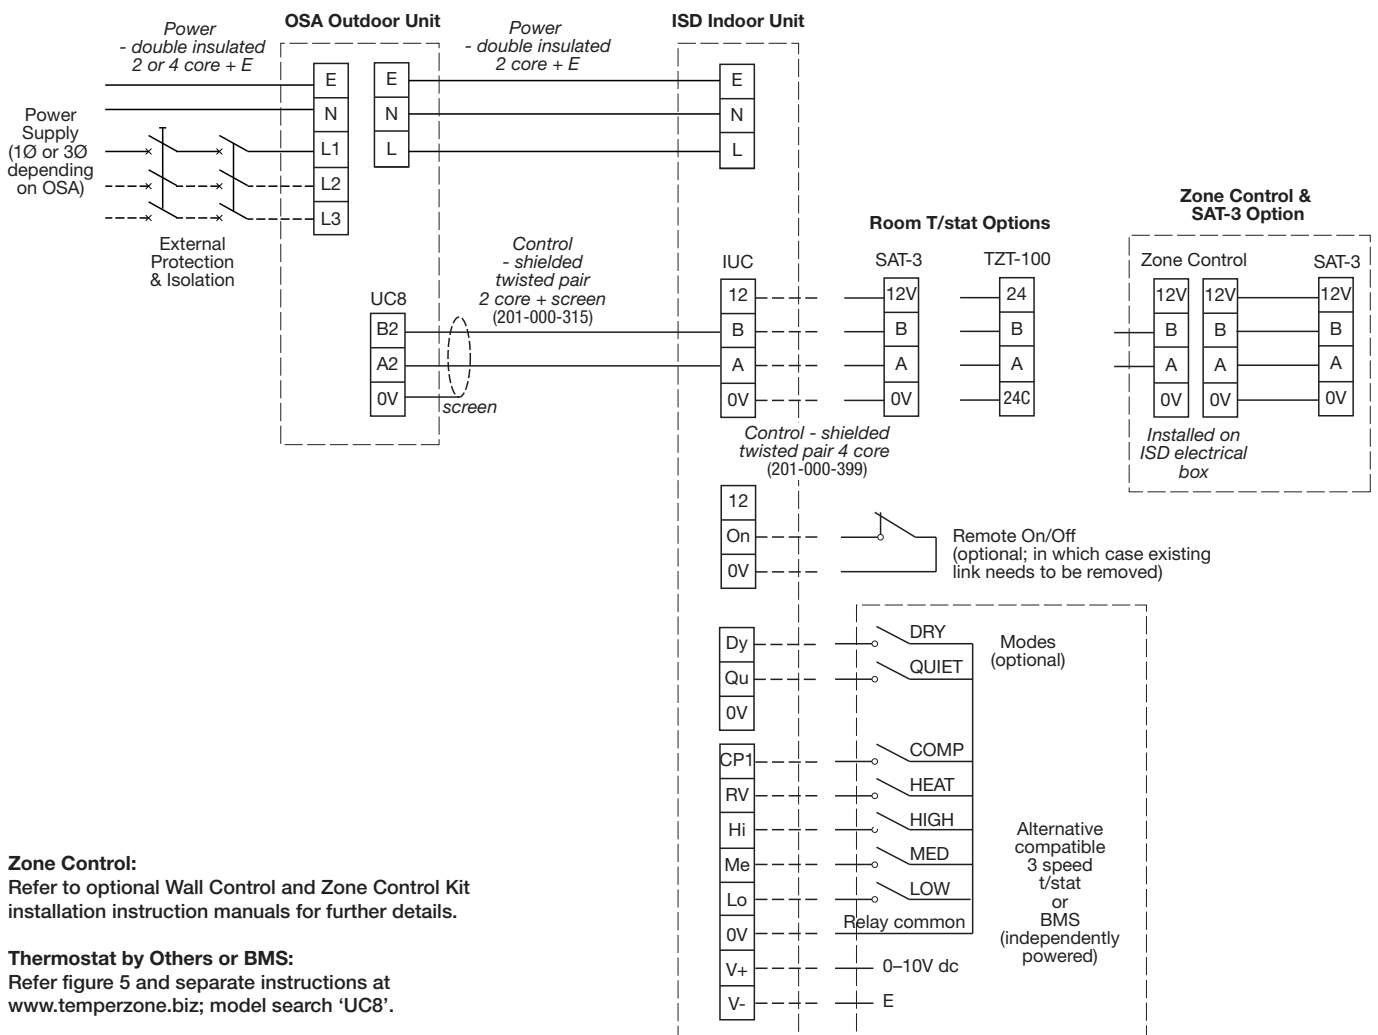


Figure 4. CONNECTION WIRING

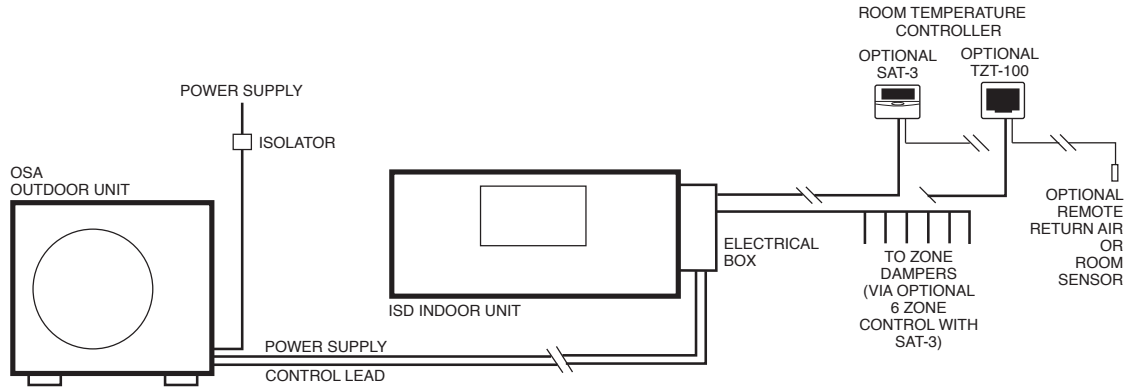

Zone Control:
 Refer to optional Wall Control and Zone Control Kit installation instruction manuals for further details.

Thermostat by Others or BMS:
 Refer figure 5 and separate instructions at www.temperzone.biz; model search 'UC8'.

Figure 5. CONNECTING ALTERNATIVE THERMOSTATS (Non-communicating contact switching type)

A non-temperzone alternative thermostat can be connected to:

1. IUC on the indoor unit (as shown on p.6), or
2. UC8 on the outdoor unit, as shown below.

NOTE: DO NOT try to connect an alternative thermostat to both the IUC on the indoor unit and the UC8 on the outdoor unit. It is one or the other, not both.

